



TICKETING SYSTEM MANUAL

SOFTWARE COMPATIBLE WITH:





EN: CLOAKROOM, LUGGAGE TAG & ENTRY TICKETING SYSTEM

 
FR: SYSTÈME D'ÉTIQUETAGE POUR VESTIAIRES, BAGAGES ET TICKETS

DE: GARDEROBEN, GEPÄCKAUFBEWAHRUNG & EINTRITTSKASSE TICKETSYSTEM

ES: IMPRESORA Y SISTEMA DE CONTROL PARA GUARDARROPA, EQUIPAJE Y ENTRADAS

NL: GARDEROBE, ENTREE & BAGAGELABEL KASSA TICKET SYSTEEM

BOX CONTENT

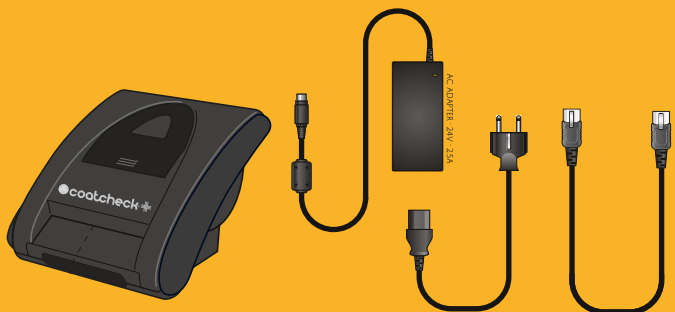

TICKET
PRINTER

AC/DC
ADAPTER

POWER
CABLE

NETWORK
CABLE



USE IN A DRY AND DUST-FREE ENVIRONMENT. KEEP AWAY FROM LIQUIDS. KEEP AWAY FROM CHILDREN. DO NOT OPEN THE TICKET PRINTER USING TOOLS.



UTILISEZ DANS UN ENVIRONNEMENT SEC ET SANS POUSSIÈRE. ÉLOIGNER DES LIQUIDES. GARDER LOIN DES ENFANTS. NE PAS OUVRIR L'IMPRIMANTE DE BILLETS EN UTILISANT DES OUTILS.



BITTE VERWENDEN IN EINEM TROCKENEN UND STAUBFREIEN UMGEBUNG. FERNHALTEN VON FLÜSSIGKEITEN. VON KINDERN FERNHALTEN. OFFNEN SIE DIE TICKETDRUCKER NICHT MIT WERKZEUGEN.

 
UTILIZAR EN UN AMBIENTE SECO Y LIBRE DE POLVO. MANTENER ALEJADO DE LÍQUIDOS. NO APROPIADO PARA NIÑOS. NO ABRIR LA IMPRESORA, UTILIZANDO HERRAMIENTAS.

GEbruik IN EEN DROGE EN STOFVRIJE OMGEVING. HOUD UIT DE BUURT VAN VLOEISTOFFEN. NIET GESCHIKT VOOR GEBRUIK DOOR KINDEREN. TICKETPRINTER NIET OPENEN MET GEREEDSCHAP.



INDEX:

- 4: EASY SET-UP
- 5: QUICK LOAD
- 6: NORMAL USE
- 7: X & Z REPORTS WITHOUT KEY BOARD
- 8: X & Z REPORTS WITH KEY BOARD
- 9: SOFTWARE & EDITING TICKETS ON LAP-TOP
- 10-13: EDITING TICKETS
- 14: EDITING PRINTER SETTINGS
- 15: EDITING REPORTS
- 16: UPLOAD LOGO SECTION
- 17: CONNECT TO MOBILE SOFTWARE
- 18: MOBILE SOFTWARE
- 19: MENU OVERVIEW
- 20: EDITING TICKETS
- 21: EDITING REPORTS
- 22: UPLOADING LOGO'S
- 23: PRINTER SET-UP
- 24-26: EXAMPLE TICKETS/LOGO USE
- 27: QUICK MAINTENANCE

QUICK CONNECT

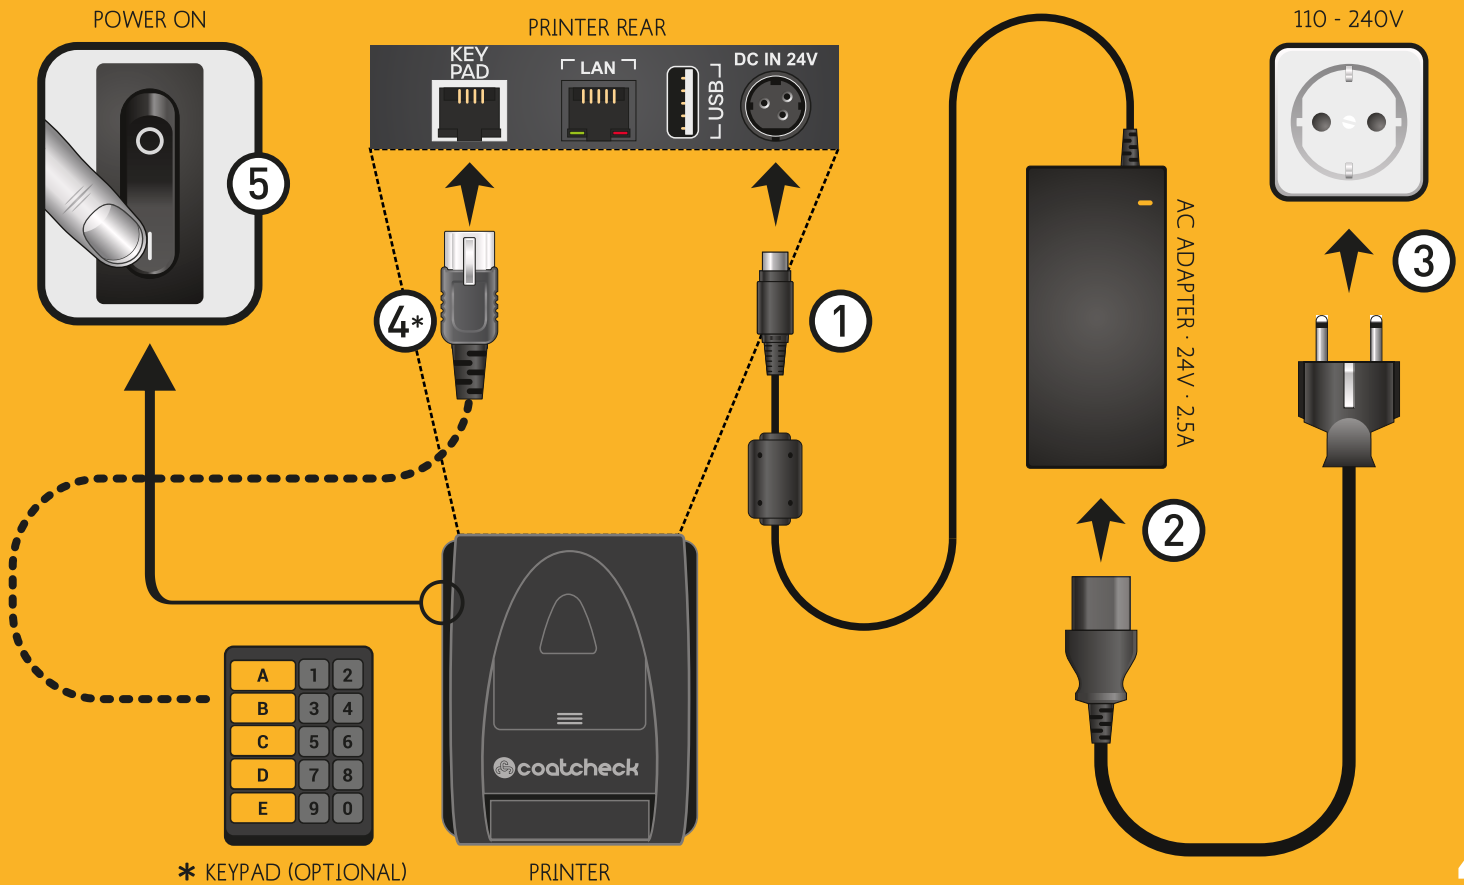

QUICK LOAD

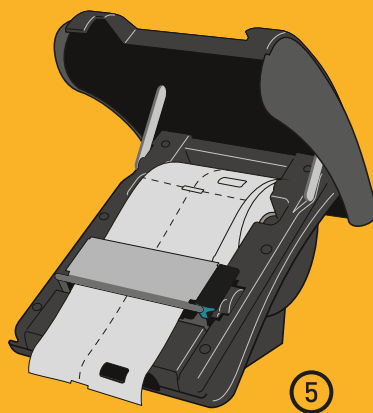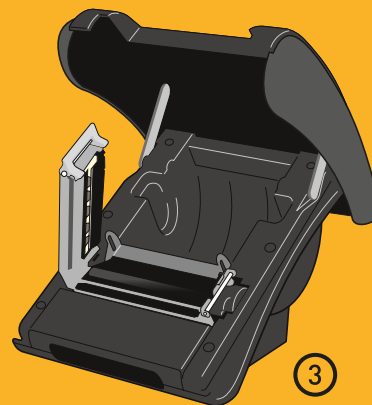  

NORMAL USE





X + Z TOTALS

(WITHOUT OPTIONAL KEY-PAD)

X - TOTAL: NO NUMBER RESET, TICKET COUNT SPECIFIED BY 30 MIN.

Z - TOTAL: NUMBER RESET, TOTAL TICKET COUNT SPECIFIED BY 30 MIN.



POWER OFF



 
PRESS & HOLD
TICKET BUTTON



POWER ON



HOLD

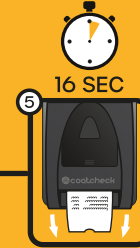

HOLD TICKET BUTTON
FOR Z-TOTAL
OR
RELEASE TICKET BUTTON
FOR X-TOTAL



AFTER PRINTING A Z-REPORT THE COUNTER WILL BE SET TO ZERO

X + Z TOTALS

(WITH OPTIONAL KEY-PAD)

X - TOTAL: NO NUMBER RESET, TICKET COUNT SPECIFIED BY 30 MIN.

Z - TOTAL: NUMBER RESET, TOTAL TICKET COUNT SPECIFIED BY 30 MIN.



X - TOTAL: PRESS 1,2,3,4,5 **A**

Z - TOTAL: PRESS 1,2,3,4,5 **B**

*WITH OUR SOFTWARE YOU CAN
INSTALL YOUR PERSONAL PINCODE



AFTER PRINTING A Z-REPORT THE COUNTER WILL BE SET TO ZERO

coatcheck®

WIRELESS

SOFTWARE FOR TICKET EDITING



CONNECT YOUR PC TO WIFI:

COATCHECK_....

PASSWORD TO CONNECT:

COATCHECK_1234

LAUNCH YOUR WEB BROWSER AND
CONNECT THE PRINTER
USING THIS LINK

<http://192.168.2.1/update>



Coatcheck Plus - Firmw. x + -

192.168.2.1/update/

Config Ticket Layout

Header Image

A ①

Ticket Type: CLOAKROOM ② Enable: Yes ③

Number Series: Master ④ Print Ticket Number: No

Print Data and Time: Yes

Icon o Letter CLOAKROOM: coat hanger

Ticket Description: 1 Item

Ticket Price: 2.5 Print Price: Yes

Start Ticket Number: 1

Stop Ticket Number: 9999

Numbers of Ticket Printed by Pressure: 1 ⑤

Print Voucher: No -> 1 Print Header Logo: 1 ⑥

☒ Print Example

Update Ticket Config ⑧



EDIT „CLOAKROOM“

- 1: SELECT THE BUTTON TO EDIT
- 2: SELECT YOUR TICKET TYPE
- 3: BUTTONS CAN BE SWITCHED ON OR OFF
- 4: EACH BUTTON IT'S OWN NUMBER SERIES OR NUMBER SERIES DIFFERENT BUTTONS COMBINED
- 5: 1 OR MORE TICKETS WITH 1 PUSH
- 6: SELECT YOUR LOGO 1 OF 20 PIECES
- 7: PREVIEW OF YOUR SELECTED LOGO
- 8: UPDATE YOUR CHANGES AND PRINT A PREVIEW TICKET

The screenshot shows the 'Config Ticket Layout' interface in a web browser. The browser's address bar shows '192.168.2.1/update/'. The interface includes a 'Header Image' section with a preview of a ticket layout (a rectangle with 'L', 'C', 'B', and 'U' in the corners and an 'X' across it). Below this are various configuration options for the ticket layout, each with a numbered callout (1-10) indicating a step in the process. The options include 'Ticket Type' (set to 'ENTRY MD LOGO'), 'Number Series' (set to 'Master'), 'Print Ticket Number' (set to 'Yes'), 'Ticket Price' (set to '1'), 'Start Ticket Number' (set to '1'), 'Stop Ticket Number' (set to '9999'), 'FREE TEXT 1', 'FREE TEXT 2', 'FREE TEXT 3', 'Numbers of Ticket Printed by Pressure' (set to '1'), 'Print Voucher' (set to 'No'), and 'Print Header Logo' (set to '1'). At the bottom, there is a 'Print Example' checkbox and an 'Update Ticket Config' button.

Coatcheck Plus - Firmw: X

192.168.2.1/update/

Config Ticket Layout

Header Image

1

2

3

4

5

6

7

8

9

10

Ticket Type: ENTRY MD LOGO

Number Series: Master

Print Ticket Number: Yes

Ticket Price: 1

Start Ticket Number: 1

Stop Ticket Number: 9999

FREE TEXT 1: FREE TEXT 1

FREE TEXT 2: FREE TEXT 2

FREE TEXT 3: FREE TEXT 3

Numbers of Ticket Printed by Pressure: 1

Print Voucher: No

Print Header Logo: 1

Print Example

Update Ticket Config

EDIT „ENTRY MID LOGO“

- 1: SELECT THE BUTTON TO EDIT
- 2: SELECT YOUR TICKET TYPE
- 3: BUTTONS CAN BE SWITCHED ON OR OFF
- 4: EACH BUTTON IT'S OWN NUMBER SERIES OR NUMBER SERIES DIFFERENT BUTTONS COMBINED
- 5: 1 TICKET PER PERSON OR 1 TICKET FOR MULTIPLE PERSONS
- 6: 3 LINES OF TEXT EACH 25 CARACTERS
- 7: 1 OR MORE TICKETS WITH 1 PUSH
- 8: SELECT YOUR HEADER LOGO
- 9: PREVIEW OF YOUR SELECTED LOGO
- 10: UPDATE YOUR CHANGES AND PRINT A PREVIEW TICKET

The screenshot shows the 'Config Ticket Layout' page in a web browser. The page has a header with a logo (1) and a title. The main content area contains several configuration sections:

- Ticket Type:** A dropdown menu set to 'ENTRY BIG SIZE LOGO' (2).
- Enable:** A 'Yes' button (3).
- Number Series:** A dropdown menu set to 'Master' (4).
- Group Enable:** A 'No' button (5).
- Print Ticket Number:** A 'Yes' button (6).
- Print Data and Time:** A 'Yes' button (7).
- Ticket Price:** A text input field with '1' (8).
- Print Price:** A 'Yes' button (9).
- Start Ticket Number:** A text input field with '1' (10).
- Stop Ticket Number:** A text input field with '9999' (11).
- FREE TEXT 1:** A text input field with 'FREE TEXT 1' (12).
- Numbers of Ticket Printed by Pressure:** A text input field with '1' (13).
- Print Voucher:** A 'No' button (14).
- Print Header Logo:** A '1' button (15).

 On the right side, there is a 'Header Image' section with a preview of a ticket layout (16) and a '9' button below it. At the bottom left, there is a 'Print Example' checkbox (17) and an 'Update Ticket Config' button (18).

EDIT „ENTRY BIG LOGO“

- 1: SELECT THE BUTTON TO EDIT
- 2: SELECT YOUR TICKET TYPE
- 3: BUTTONS CAN BE SWITCHED ON OR OFF
- 4: EACH BUTTON IT'S OWN NUMBER SERIES OR NUMBER SERIES DIFFERENT BUTTONS COMBINED
- 5: 1 TICKET PER PERSON OR 1 TICKET FOR MULTIPLE PERSONS
- 6: 1 LINE OF TEXT 25 CHARACTERS
- 7: 1 OR MORE TICKETS WITH 1 PUSH
- 8: SELECT YOUR HEADER LOGO
- 9: PREVIEW OF YOUR SELECTED LOGO
- 10: UPDATE YOUR CHANGES AND PRINT A PREVIEW TICKET

The screenshot shows a web browser window titled 'Coatcheck Plus - Firmw...' with the URL '192.168.2.1/update/'. The page is titled 'Config Ticket Layout'. It contains various configuration options for a ticket layout, with numbered callouts (1-11) indicating specific features:

- 1: Ticket Type dropdown menu (set to 'CONCERT MD LOGO')
- 2: Enable checkbox for the selected ticket type
- 3: Yes/No dropdown for the 'Enable' option
- 4: Number Series dropdown menu (set to 'Master')
- 5: Group Enable checkbox
- 6: Group Enable Yes/No dropdown
- 7: Print Ticket Number Yes/No dropdown
- 8: Print Data and Time Yes/No dropdown
- 9: Ticket Price input field (set to '1')
- 10: Print Price Yes/No dropdown
- 11: Start Ticket Number input field (set to '1')
- 12: Stop Ticket Number input field (set to '9999')
- 13: FREE TEXT 1 input field
- 14: FREE TEXT 2 input field
- 15: Numbers of Ticket Printed by Pressure input field (set to '1')
- 16: Print Voucher dropdown menu (set to 'No')
- 17: Print Header Logo dropdown menu (set to '1')
- 18: Print Logo Concert dropdown menu (set to 'Select Image')
- 19: Select Image button
- 20: Update Ticket Config button

On the right side of the interface, there are two preview images:

- 'Header Image': A diagram showing a rectangular area divided into four quadrants labeled 'L', 'U', 'B', and 'C'.
- 'Concert Image': A logo featuring a stylized sun/moon with the word 'MOON' below it.

EDIT „CONCERT MID LOGO“

- 1: SELECT THE BUTTON TO EDIT
- 2: SELECT YOUR TICKET TYPE
- 3: BUTTONS CAN BE SWITCHED ON OR OFF
- 4: EACH BUTTON IT'S OWN NUMBER SERIES OR NUMBER SERIES DIFFERENT BUTTONS COMBINED
- 5: 1 TICKET PER PERSON OR 1 TICKET FOR MULTIPLE PERSONS
- 6: 2 LINES OF TEXT 25 CHARACTERS
- 7: 1 OR MORE TICKETS WITH 1 PUSH
- 8: SELECT YOUR HEADER LOGO
- 9: SELECT YOUR FOOTER LOGO
- 10: PREVIEW OF YOUR SELECTED LOGO
- 11: UPDATE YOUR CHANGES AND PRINT A PREVIEW TICKET

Coatcheck Plus - Firmw: X + -

192.168.2.1/update/

Config Ticket Layout

A ①

Ticket Type: **CONCERT BIG LOGO** ② Enable: Yes ③

Number Series: **Master** ④ Group Enable: No ⑤

Print Ticket Number: Yes Print Data and Time: Yes

Ticket Price: 1 Print Price: Yes

Start Ticket Number: 1

Stop Ticket Number: 9999

FREE TEXT 1: FREE TEXT 1 ⑥

Numbers of Ticket Printed by Pressure: 1 ⑦

 
Print Voucher: No Print Header Logo: 1

Print Logo Concert: Select Image ⑧ 1 ⑧

☒ Print Example

Update Ticket Config ⑪

Header Image



Concert Image



EDIT „CONCERT BIG LOGO“

- 1: SELECT THE BUTTON TO EDIT
- 2: SELECT YOUR TICKET TYPE
- 3: BUTTONS CAN BE SWITCHED ON OR OFF
- 4: EACH BUTTON IT'S OWN NUMBER SERIES OR NUMBER SERIES DIFFERENT BUTTONS COMBINED
- 5: 1 TICKET PER PERSON OR 1 TICKET FOR MULTIPLE PERSONS
- 6: 1 LINE OF TEXT 25 CHARACTERS
- 7: 1 OR MORE TICKETS WITH 1 PUSH
- 8: SELECT YOUR HEADER LOGO
- 9: SELECT YOUR FOOTER LOGO
- 10: PREVIEW OF YOUR SELECTED LOGO
- 11: UPDATE YOUR CHANGES AND PRINT A PREVIEW TICKET

Coatcheck Plus - Firmw: X

192.168.2.1/update/

Main Config

1 Language ENG 2 Printer Id 0001 3 Currency €

4 Enable Serial Number No Enable Grand Total No 5

Enable Reprint On Report No Enable X-Report Yes 6

Update Main Config

Agent Config

Footer Description www.ticketprinter.shop

Agent Name Leisure Management Solutions BV

Update Agent Config

EDIT MAIN CONFIGURATION

- 1: SELECT LANGUAGE
- 2: LABEL EACH PRINTER
- 3: SELECT CURRENCY
- 4: EACH PRINTED TICKET WITH IDENTICLE NUMBER
- 5: GRAND TOTAL ON Z-REPORT
- 6: ENABLE X-REPORT

Coatcheck Plus - Firmw: X + -

192.168.2.1/update/

Pin Config

Owner Pin 1

Manager Pin 2

3 From: 6-1-2018 To: 6-1-2018

4 From: 1 To: 1

ID to Assign at the Image. Range 1 to 20 each

Header Size 240x168 5

1 6

G:\LOGO'S\adam toren.t Bladeren... 7

8

 
9

EDIT PIN CONFIGURATION

- 1: SET PERSONAL PIN OWNER
- 2: SET PERSONAL PIN MANAGER
- 3: REPRINT Z-REPORTS BY DATE RANGE
- 4: REPRINT Z-REPORTS BY ID RANGE

UPLOAD LOGO'S

- 5: SELECT LOGO TYPE
- 6: SELECT LOGO NUMBER 1 TO 20
- 7: LOAD YOUR LOGO
- 8: UPLOAD YOUR LOGO
- 9: ERASE LOGO

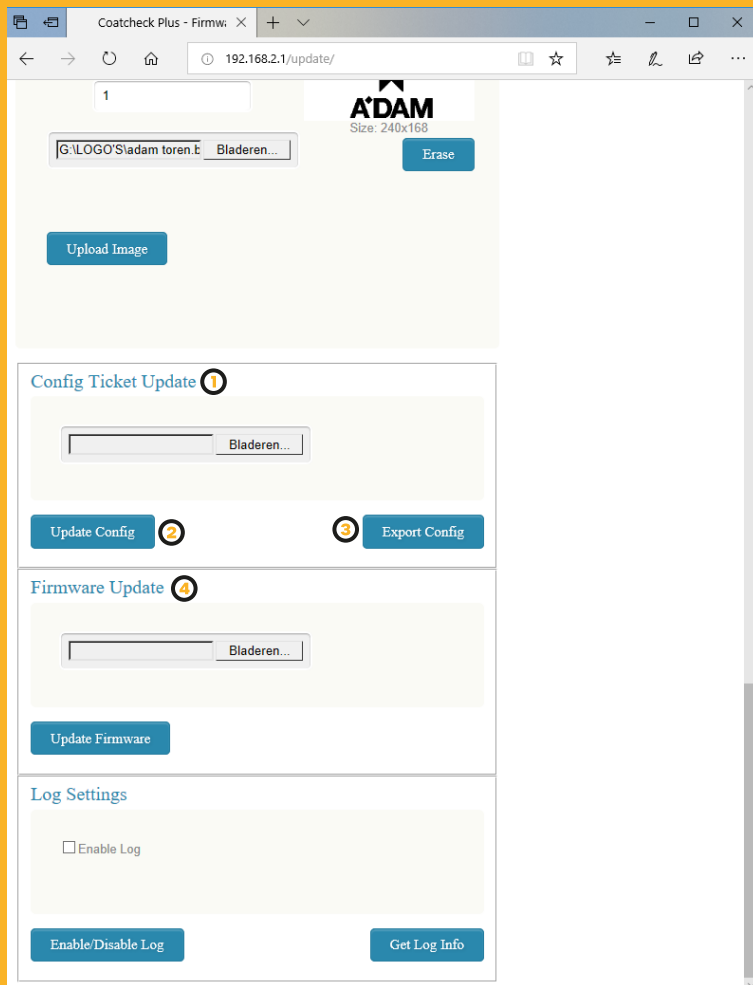

EDIT TICKET CONFIGURATION

- 1: UPLOAD OR SAVE TICKET LAYOUT
- 2: LOAD AN EARLIER SAVED LAYOUT
- 3: SAVE A LAYOUT ON YOUR PC

UPDATE FIRMWARE

- 4: HERE YOU CAN UPDATE FIRMWARE OF YOUR TICKETPRINTER



MOBILE WIRELESS SOFTWARE FOR TICKET EDITING AVAILABLE 1 NOV 2019

coatcheck 

CONNECT YOUR DEVICE TO WIFI:

COATCHECK_....

PASSWORD TO CONNECT:

COATCHECK_1234





EDIT TICKETS



REPORTS



LOGO'S



SETUP



A



B



C



D



E



EDIT TICKETS

TICKET TYPE

ENABLED

ICON/LETTER

NUMBER SERIES:

PRINT TICKET NUMBER

PRINT LOGO

PREVIEW LOGO

PRINT DATE/TIME

\$2

PRINT PRICE

START TICKET NUMBER

STOP TICKET NUMBER

VOUCHER IMAGE

NUMBER OF TICKETS ON PUSH

PRINT TEST TICKET ON SAVE



MENU

SAVE TICKET

REPORTS

Z-REPORT

PRINT LAST Z-REPORT

REPORTS



PRINT X-REPORT

1

PRINT X-REPORT



1

PRINT SEQ.NUMBER

07-07-2019

07-08-2019



MENU



REPORTS

PRINT DATE RANGE

LOGOS

HEADER SIZE 240 X 168

1

LOGO'S



CHOOSE FILE

SENT FILE



coatcheck® 



MENU

PRINTER SET-UP

0001

ENG

\$

ENABLE SERIAL NUMBER PRINT

ENABLE X-REPORT

ENABLE REPRINT REPORT

ENABLE GRAND TOTAL

SAVE CONFIGURATION

SET-UP



DEFAULT SETTINGS

SYNC DATE/TIME

EXPORT SETTINGS

IMPORT SETTINGS

UPDATE FIRMWARE

ADVANCED SETTINGS



MENU

 
TICKET EXAMPLES AND LOGO USE

FOR CLOAKROOM USE

HEADER LOGO 240 X 160 PIX

USE BMP FILES IN BLACK

AND WHITE ONLY FOR BEST RESULT

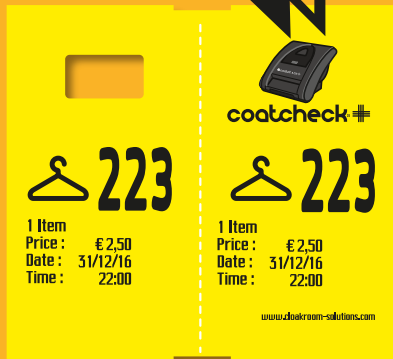

CLOAKROOM



LUGGAGE TAG SELF ADHESIVE

TICKET EXAMPLES AND LOGO USE FOR ENTRY TICKETS

FOR ADMISSION / ENTRY TICKETS

ENTRY MID SIZE LOGO 576 X 240PIX
USE BMP FILES IN BLACK
AND WHITE ONLY FOR BEST RESULT



**ENTRY MID SIZE LOGO
576 X 240**

FOR ADMISSION / ENTRY TICKETS

ENTRY BIG SIZE LOGO 576 X 360PIX
USE BMP FILES IN BLACK
AND WHITE ONLY FOR BEST RESULT



**ENTRY BIG SIZE LOGO
576 X 360**

TICKET EXAMPLES AND LOGO USE FOR CONCERT TICKETS

CONCERT
MID SIZE LOGO 576 X 240PIX
USE BMP FILES IN BLACK
AND WHITE ONLY FOR BEST RESULT



 
 
**CONCERT MID SIZE LOGO
576 X 240**

CONCERT
BIG SIZE LOGO 576 X 360PIX
USE BMP FILES IN BLACK
AND WHITE ONLY FOR BEST RESULT



**CONCERT BIG SIZE LOGO
576 X 360**

QUICK MAINTENANCE

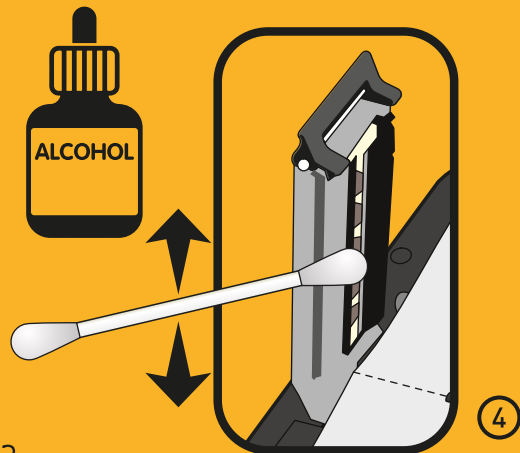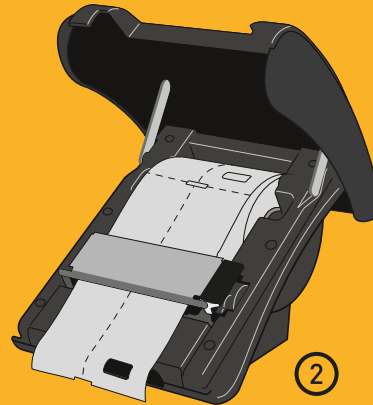



WE LOVE TO HELP YOU!

garderobe.nl



**TERWEEWEG 114,
2341 CW OEGSTGEEST**

**VERKOOP & ADVIES:
+31 (0)70 365 01 01
INFO@GARDEROBE.NL**

cloakroom.co.uk



**TERWEEWEG 114, 2341 CW
OEGSTGEEST THE NETHERLANDS**

**SALES & SERVICE:
+44 (0)203 318 8688
INFO@CLOAKROOM.CO.UK**

garderobe.de



**HELMUTSTRASSE 4
40472 DÜSSELDORF DEUTSCHLAND**

**BESTELLEN UND KUNDENSERVICE:
+49 (0)211 5457 1325
INFO@GARDEROBE.DE**